



## DIP SWITCH SETTINGS

Screen size	1	2	3	4
6.5 inch	ON▼	ON▼	OFF△	OFF△
8.8 inch	ON▼	ON▼	ON▼	OFF△
10.25 inch	ON▼	ON▼	ON▼	ON▼
DIP #7: Original MIC (OFF△), Add-on MIC (ON▼) DIP #5, #6, #8 all set to OFF△				

## SWITCH:

Press and hold **"MENU"** or **"BACK"** button on iDrive controller for 3S to switch menu. It will also switch to add on interface automatically after plugging a mobile phone or USB stick.

