

# Mercedes-Benz NTG 5.5 / 6 / MBUX Camera Video interface

Compatible with 7" , 8" , 10" and 12" screens

Compatible with cars like:

A-class (W177)  
B-class (W247)  
CLS-Coupé (C257)  
New Sprinter (W907)  
E-class W213 / C238  
S-class (facelift from June 2017)


---

Dipswitch settings	<b>page 3-4</b>
Rearview camera activation and reverse signal	<b>page 5</b>
Installation, wiring and LVDS cable	<b>page 6-13</b>
Troubleshooting	<b>page 14-19</b>



Article code: 300 214


## Diagram:

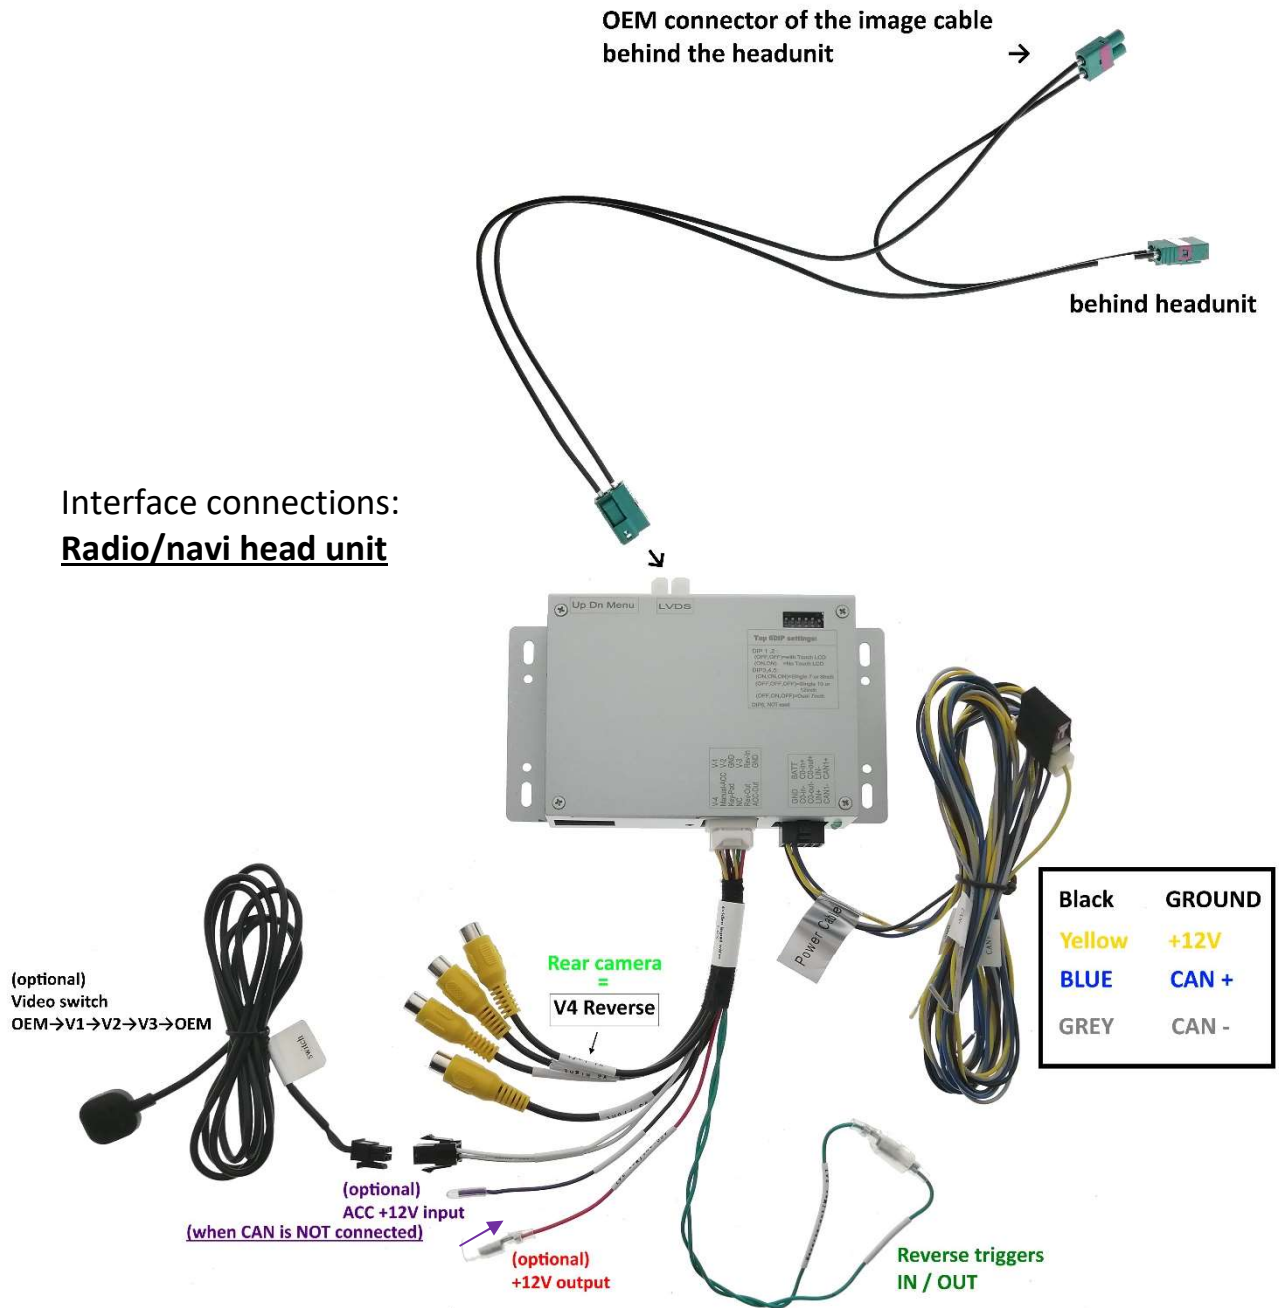


# DIP 6 settings




**WITH TOUCHSCREEN LCD**

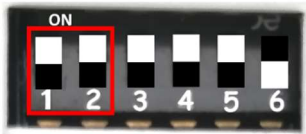


**NO TOUCHSCREEN LCD**

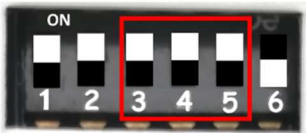

**7 or 8 INCH LCD**

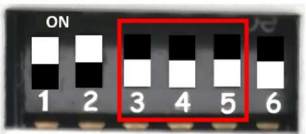

**10 or 12 INCH LCD**

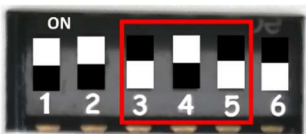

**DUALSCREEN 7 INCH**



**NOT USED**


# DIP 8 SETTINGS



**REARVIEWCAMERA (V4)**



**Show FRONT CAMERA  
10 seconds after reverse**

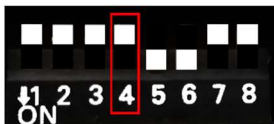

**MUST BE UP (OFF)**



**Guide lines (only on 7 inch)**



**Down / ON 7 and 8 inch  
UP / OFF 10 and 12inch**

After adjusting the dipswitch 8, please disconnect the power supply and connect this again (black connector)



**Dip 1      Video 3 – FRONT (V3)  
Dip 2      Video 1 – LEFT    (V1)  
Dip 3      Video 2 – RIGHT (V2)**

Switching from OEM screen to external sources:

- Video 1/2/3: User may use the “CALL-END” key on the steering wheel or external switch (included) to switch from OEM screen to external video sources (OEM → V1→V2→V3→OEM)

**If you don't use any video inputs, please turn dipswitch 1, 2 and 3 OFF (up)**



## Rearview camera activation


When put gear in Reverse the interface switches automatically to Reverse camera input, usually detected by CANbus system of the car.

Unfortunately sometimes reverse it's not reacting by CANbus because the car can have different CAN protocol/codes.


Also the guide lines can not be guaranteed.

In this case the reverse trigger wire of the interface should be connected with the analog reverse light signal like shown below.

**When Reverse is NOT reacting by CANbus:**

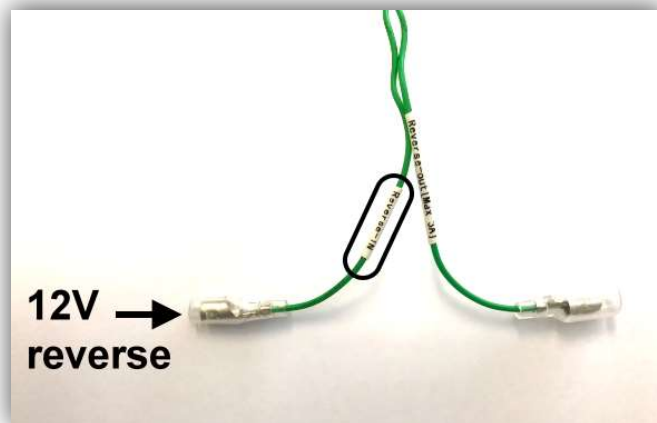

**If the reverse light is LED, use a relay like this:**

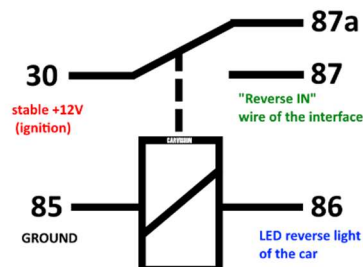


- Pin 30 → **+12V ignition**
- Pin 85 → **GROUND**
- Pin 86 → **LED reverse light**
- Pin 87 → **Green wire of the interface with label "Reverse IN"**



**Attention: MB Sprinter interface installation place**

**Place the interface box behind the storage part as mentioned below.**

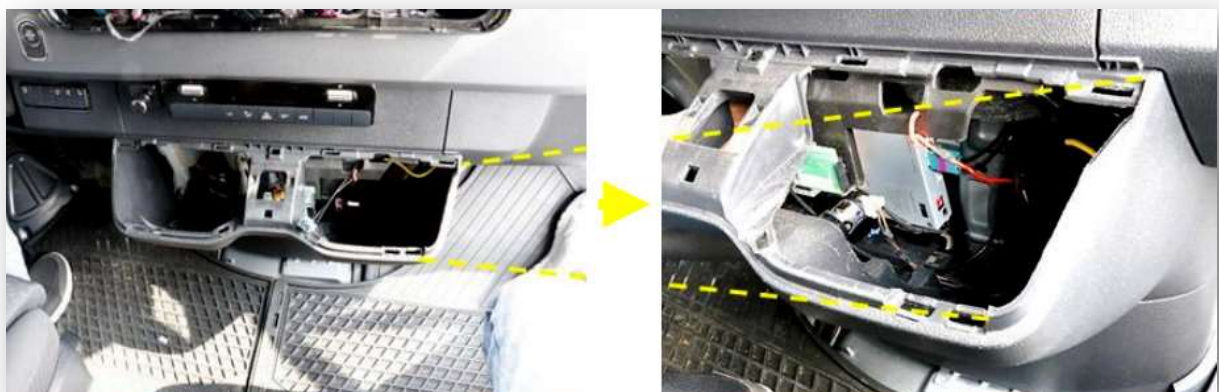

Example installation MB Sprinter MBUX:

Remove LCD part:

2x torx screws behind the air vent.



Take out the LCD part as shown below:






Take out the headunit:




Backside of headunit (**version 1**):

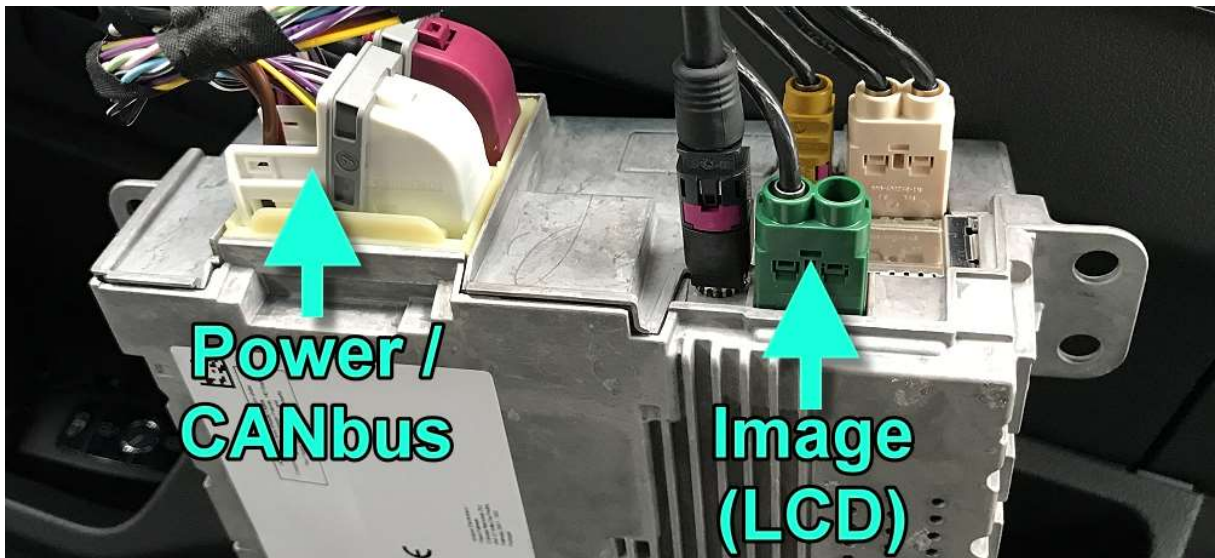

OR

Backside of headunit (**version 2**):

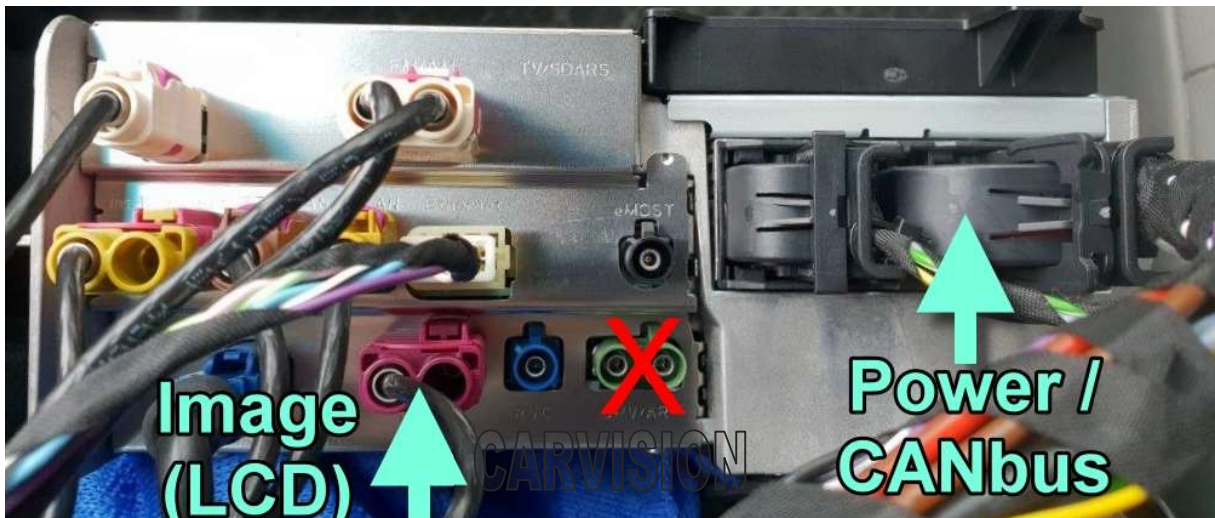





Take out the **GREEN** or **VIOLET** LCD connector:




Connect the interface LVDS cables in between like shown below:

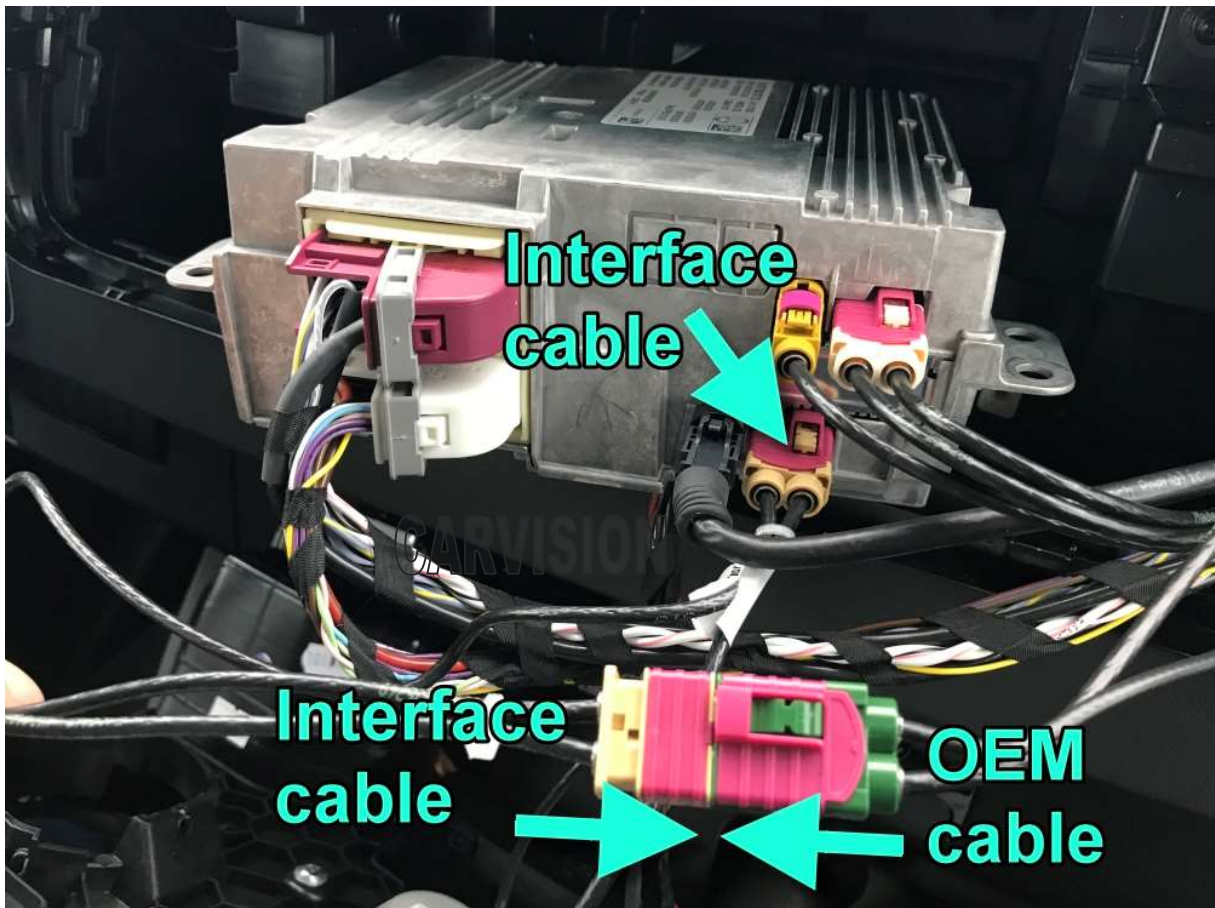

Take out the white (or black connector on some headunits) power connector:

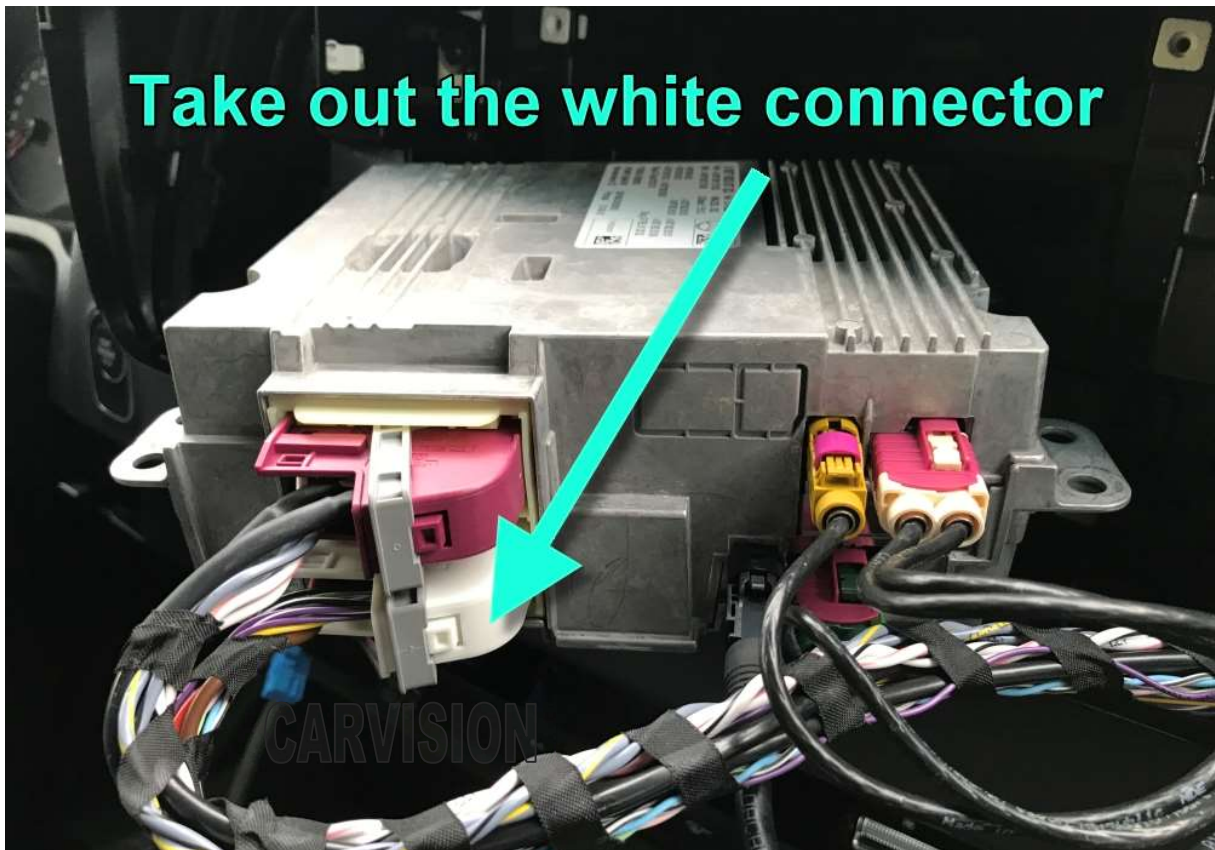

Take out the GREY part from the black housing in the white connector:

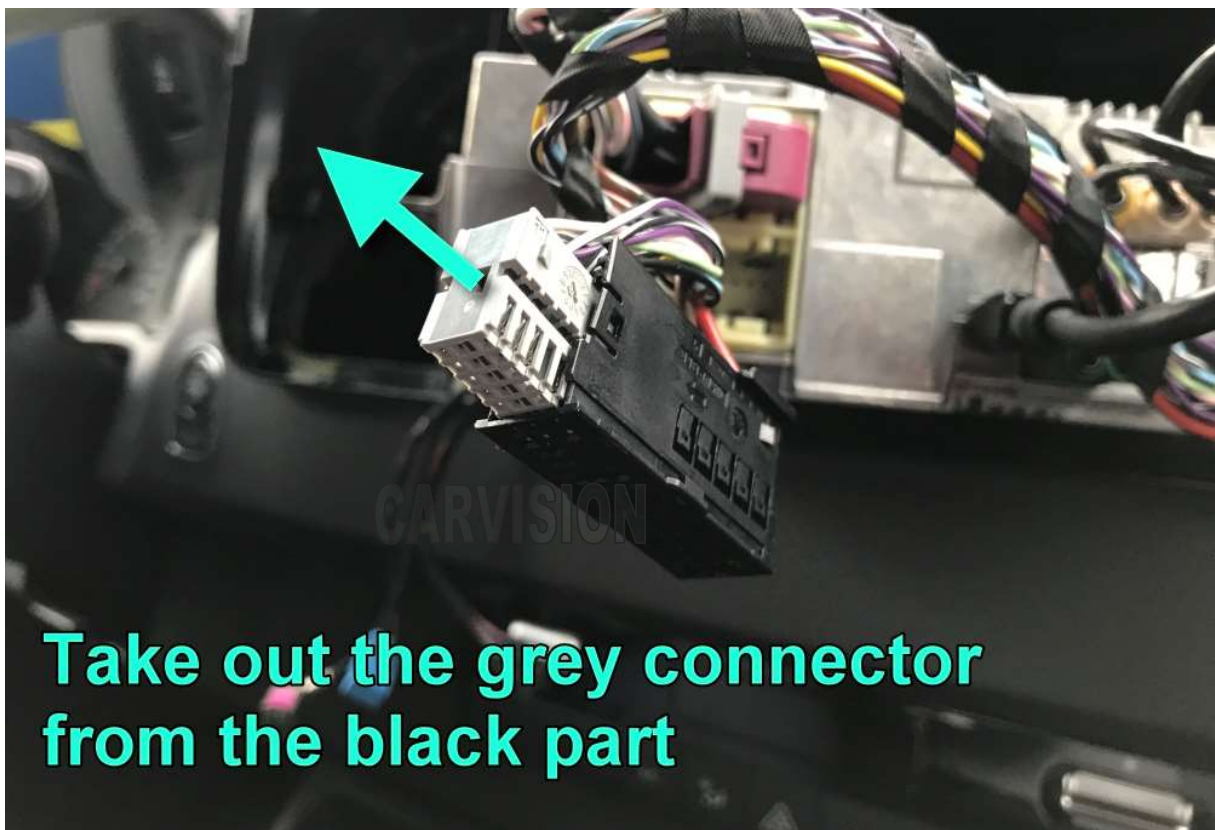




Connect the CANbus wires of the interface (version 1):

**Interface:** Blue = CAN+ / Grey = CAN-



**Car wires:** Pin 15 = CAN+ / Pin 22 = CAN-

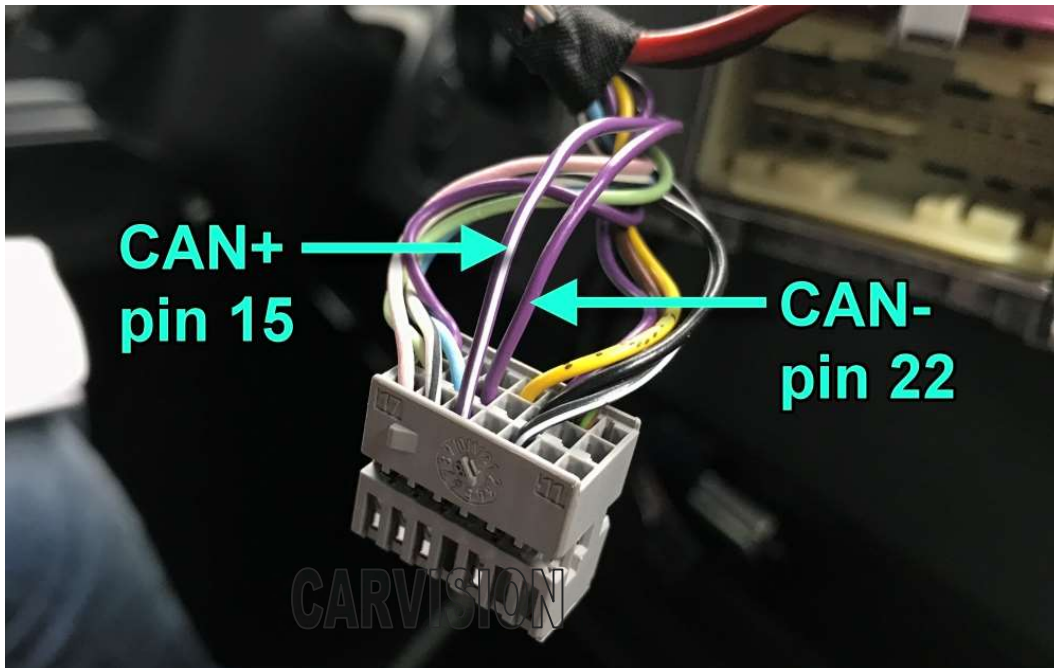


Connect the power wires (version 1):

**Interface:** Yellow = +12V / Black = ground





**Car wires:** Thick red = +12V / Thick brown = ground

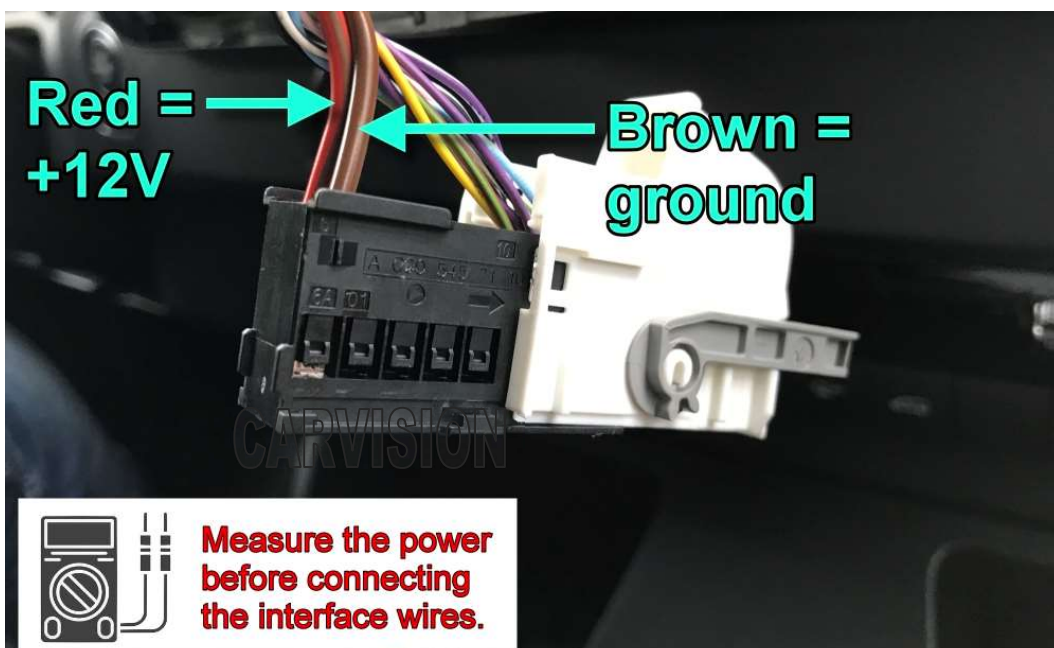

**Additionally:**



Connect the power and CANbus wires of the interface (head unit version 2) as below:

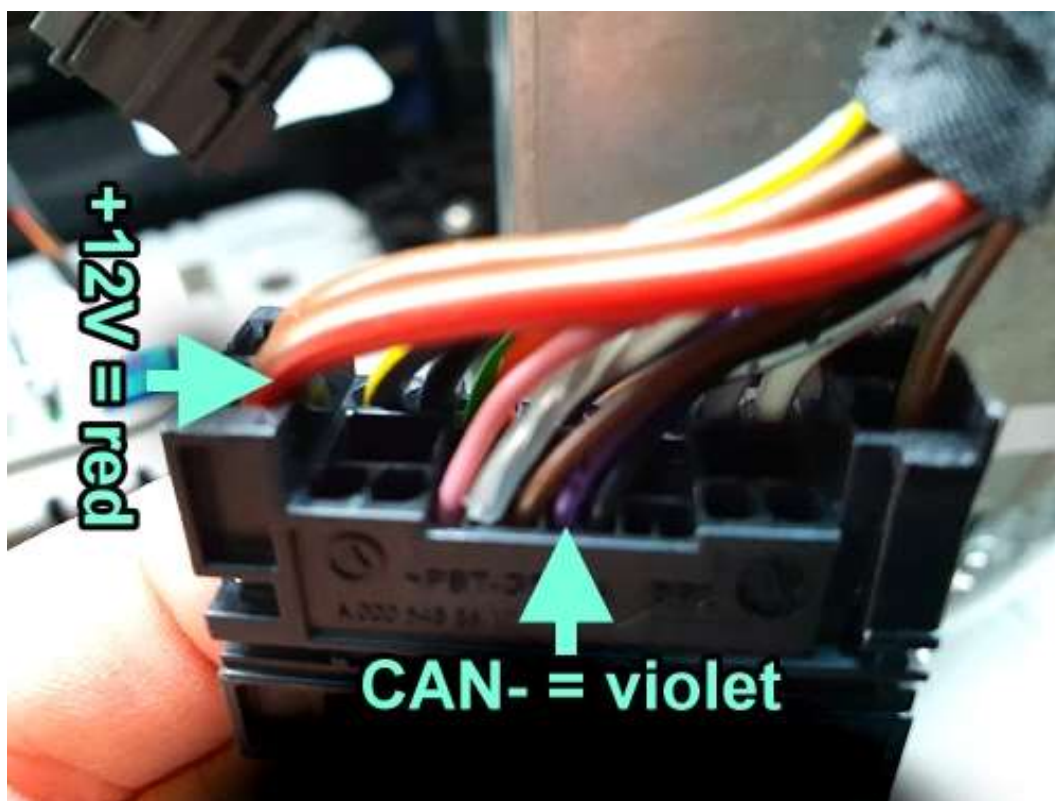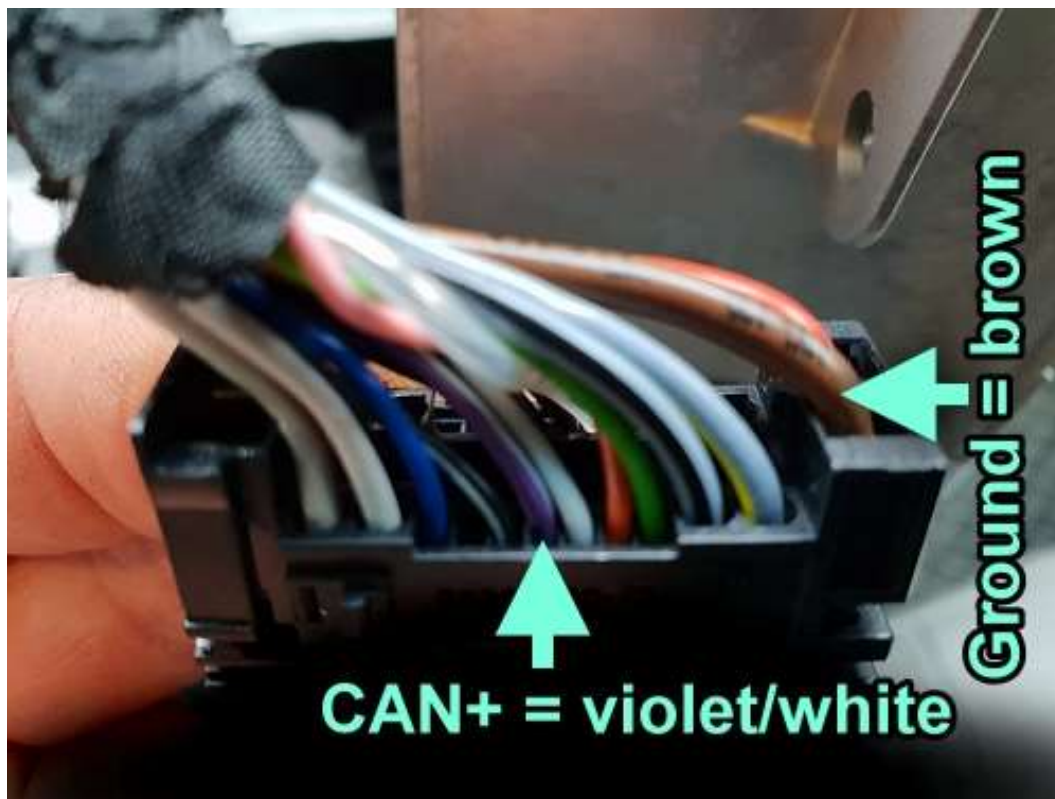



OR

NTG 5.5 with beige (double) LVDS connector and regular Quadlock power/CAN plug:

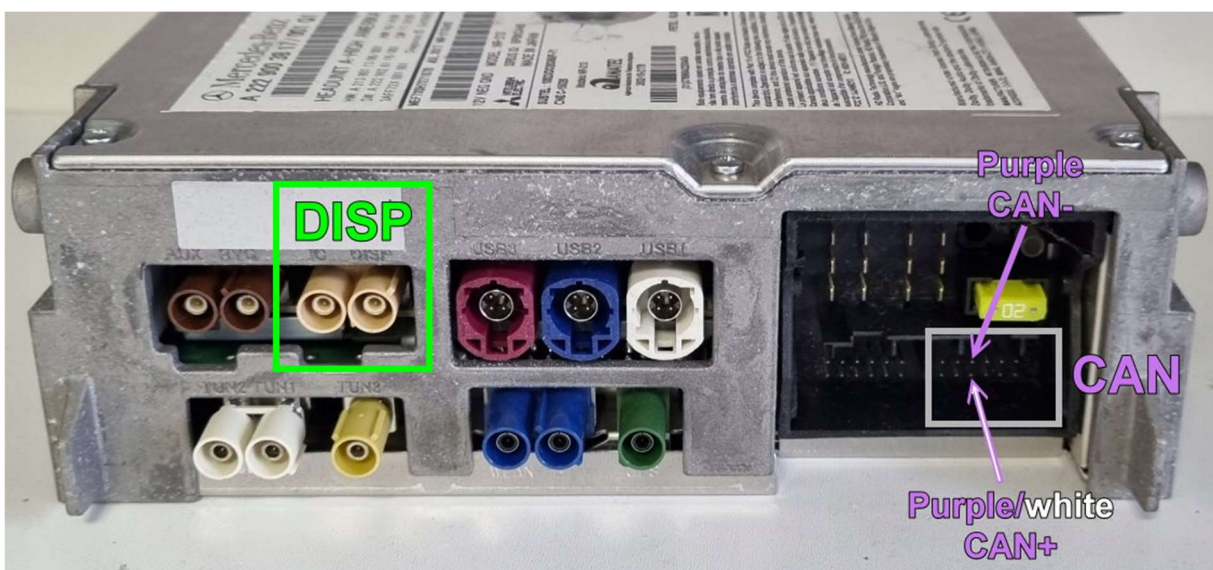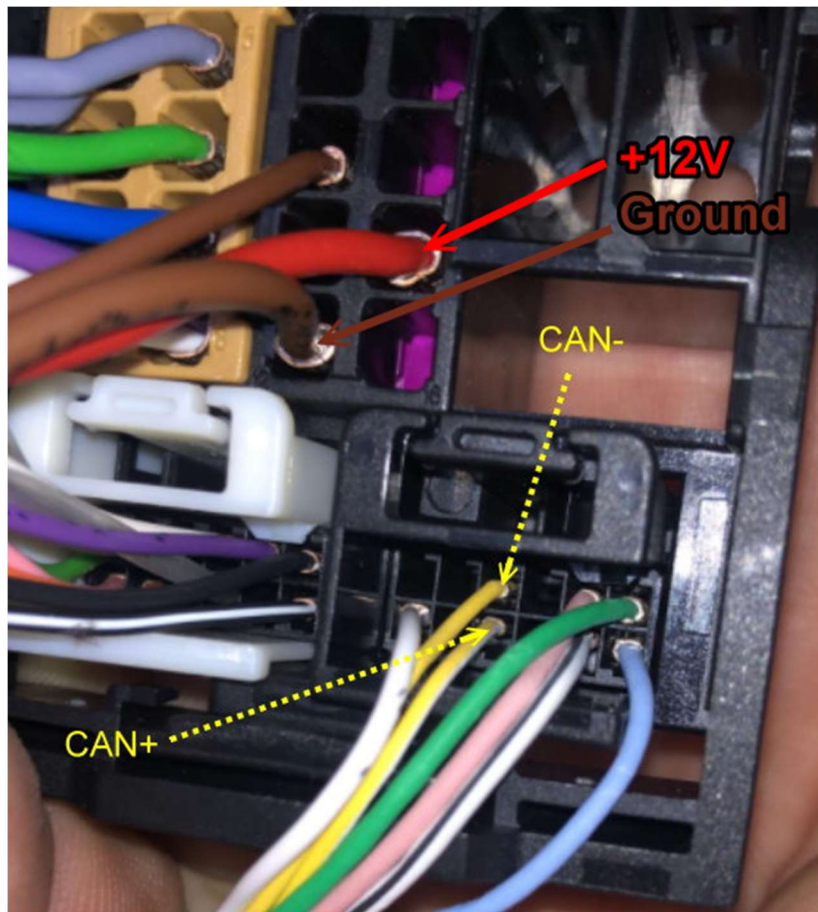


# Troubleshooting

**When you DON'T have OEM image**  
(only black screen with sound of the radio)



#1 Please check the LVDS cable

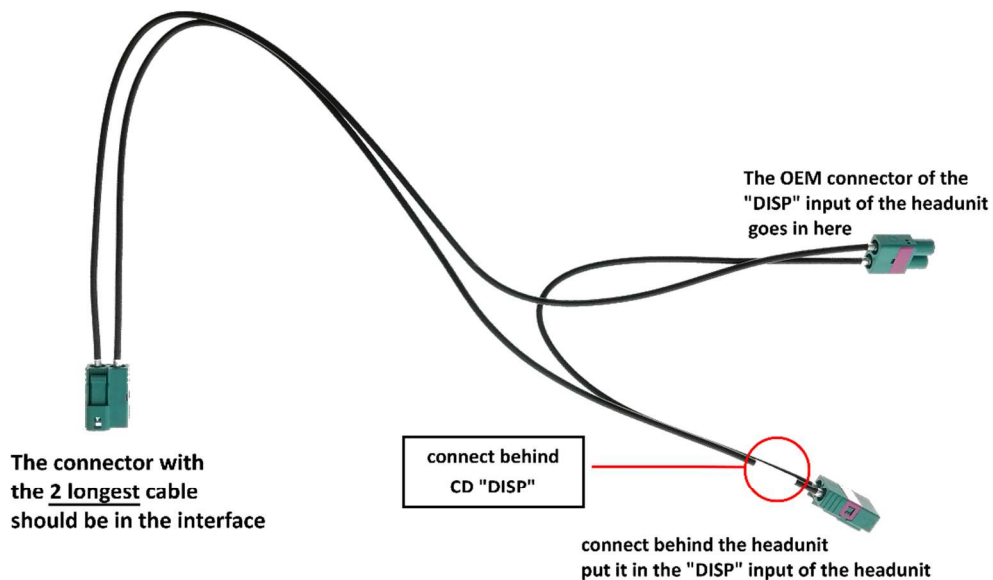

#2 Please check the power supply of the interface



Installation with CANBUS:  
Yellow wire has +12 Volt ?

Installation WITHOUT CANBUS:  
Yellow and purple wire has +12 Volt ?


# Troubleshooting

**When you have OEM image.**

After putting in reverse, nothing is happening  
(no rearviewcamera image, it stays in OEM image)




#1 Please check the green wire ("Reverse IN")

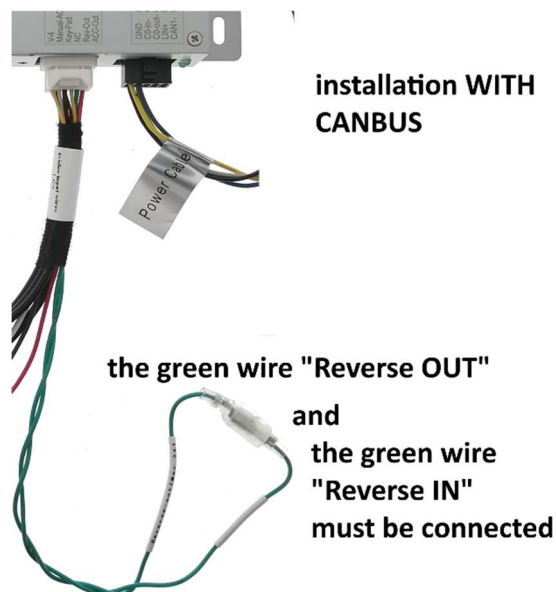


**When you put the car in reverse.  
Do you measure 12 V in  
the green wire "Reverse IN"??**

**If you don't, connect this green  
wire "Reverse IN" with an  
analogue reverse signal / light.**

Installation WITHOUT CANBUS

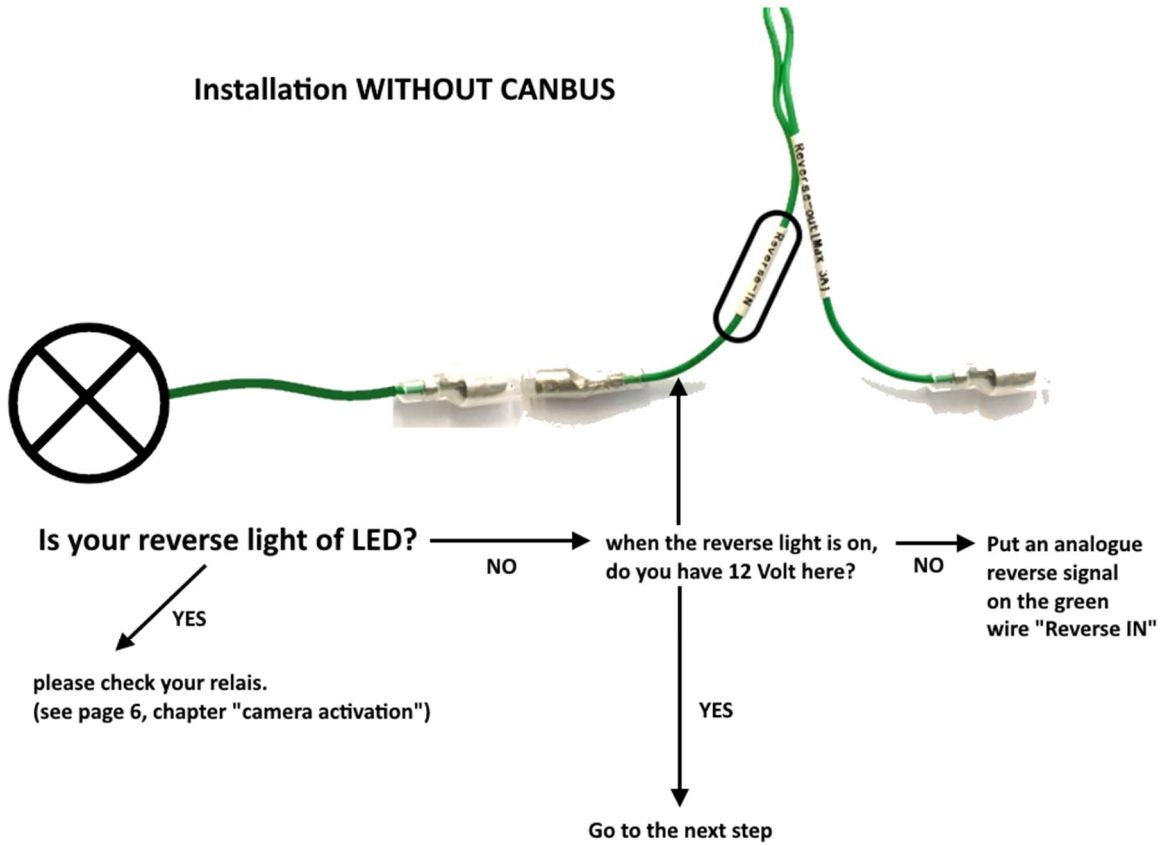

#3 Please check your dipswitch 5 (dip 8 settings)

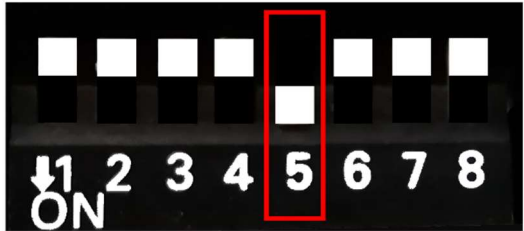

Must be down (ON)




# Troubleshooting

When you have OEM image, but no rearviewcamera image.  
After putting in reverse, it switch to black image.



## #1 Check the power supply of the rearviewcamera

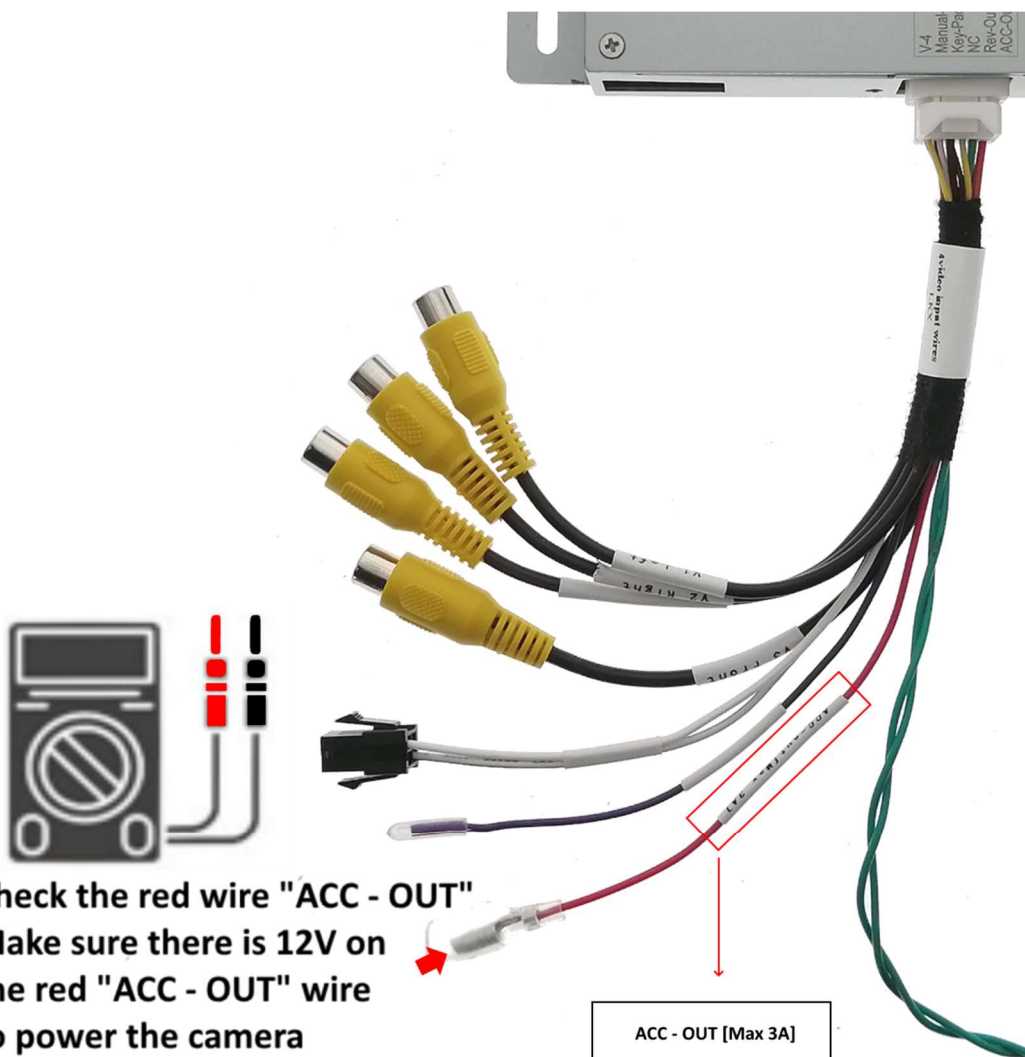


Check the red wire "ACC - OUT"  
Make sure there is 12V on  
the red "ACC - OUT" wire  
to power the camera

#2 Check camera input of the interface



#3 Power supply of the rearviewcamera

Do NOT connect the power cable of the rearviewcamera to the reverselight.  
This 12V is NOT stable, most of the cars have “duty circle” in the 12V reverselight.

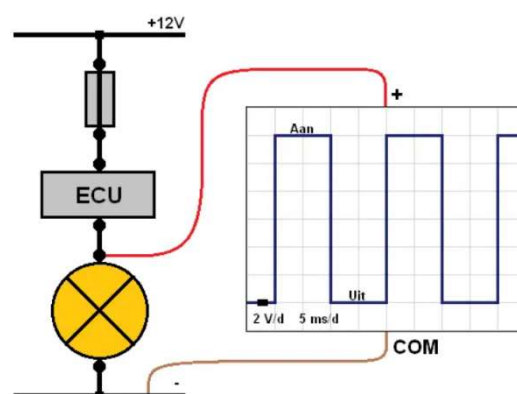


We suggest to find a stable 12V in the fusebox.  
To extend the service life of the rearviewcamera, we recommend a ignition 12 Volt.

# Troubleshooting

## Rearview image adjustment

When you have black/grey border in the rearview image

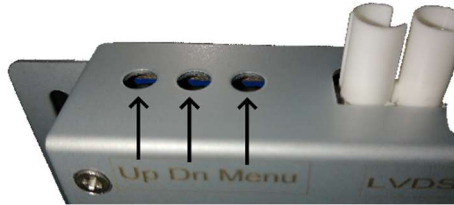

When you have camera image, press the **menu button** on the side of the interface.

The interface menu will pop up in the screen.

With **Up** or **Dn** you can move the selection bar.

Select **position H** or **position V** to adjust the position of the camera image.

### Caution:

Do **NOT** use H-Size or V-Size (This has nothing to do with adjusting the position of the image)



Adjust “position H”  
(horizontal) to move the  
image to the  
left ← or right →



Adjust “position V”  
(vertical) to move the  
image up ↑ or down ↓